



INSTALLATION GUIDELINE


# MIRAGRID PEC



# Contents


<b>1. Unloading and storage</b>	<hr/> 3
<b>2. Subgrade preparation</b>	<hr/> 3
<b>3. Unrolling</b>	<hr/> 3
<b>4. Cutting</b>	<hr/> 3
<b>5. Orientation of geotextiles</b>	<hr/> 3
<b>6. Overlapping</b>	<hr/> 4
<b>7. Placing of fill material</b>	<hr/> 4
<b>8. Spreading of fill</b>	<hr/> 4
<b>9. Compaction of fill</b>	<hr/> 4

This information is provided for reference purposes only and is not intended as a warranty or guarantee. Solmax assumes no liability in connection with the use of this information. Please check the revision date and refer to our website for the latest updates.

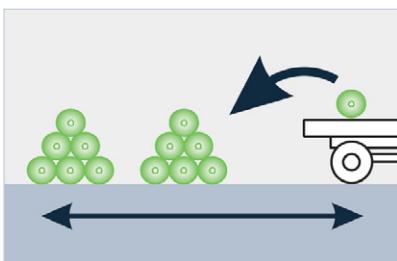


## 1. UNLOADING AND STORAGE

To avoid damage to the rolls, prepare a suitable storage area of sufficient size to allow unloading, storage, and handling. Different grades or roll size dimensions shall be stored separately. When stored for more than 2 weeks, **MIRAGRID® PEC** rolls shall be covered completely to protect them from direct sunlight.

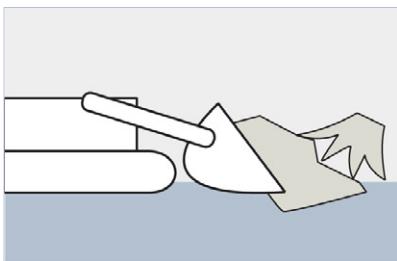


## 2. SUBGRADE PREPARATION

Level, smooth, and compact the subgrade before rolling out **MIRAGRID PEC**. Any trees shrubs and unsuitable materials, which might damage **MIRAGRID PEC** must be removed.

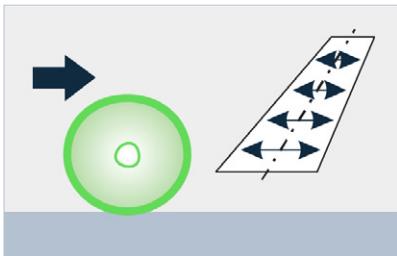


## 3. UNROLLING

Unroll **MIRAGRID PEC** onto the prepared subgrade in accordance with any design documents. In general, the longitudinal direction of **MIRAGRID PEC** shall be perpendicular to the longitudinal axis of the embankment. The geotextile must lie flat without slack, folds or similar unevenness. The time span where **MIRAGRID PEC** is exposed unprotected shall be limited to a minimum.

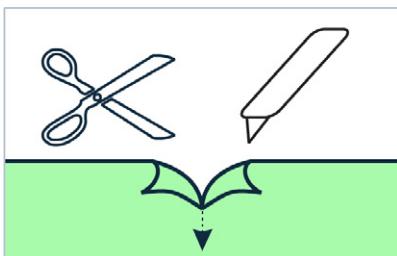


## 4. CUTTING

Cut the product to size using a sharp knife or a pair of scissors.

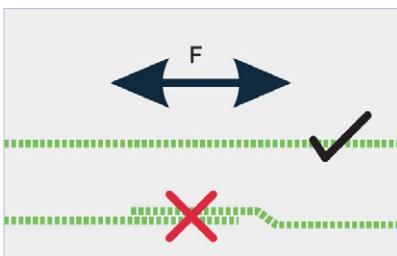


## 5. ORIENTATION OF GEOTEXTILES

Reinforcement shall be placed as perpendicular as possible to the sloped face unless specified otherwise in the design.

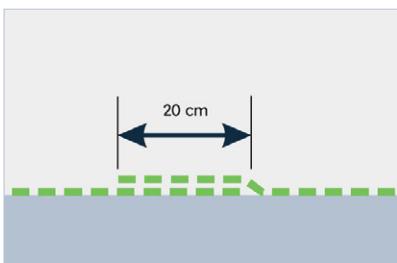


## 6. OVERLAPPING

**MIRAGRID PEC** can be joined by overlapping or sewing. The size of the overlap should be specified in the design. A transverse overlap, typically 200 mm, may be needed at the junction of adjacent panels, if not specified. If the ground is very soft, the overlap may be increased to avoid unreinforced areas. The overlap along the direction of principal stress is either forbidden or specified in the design.

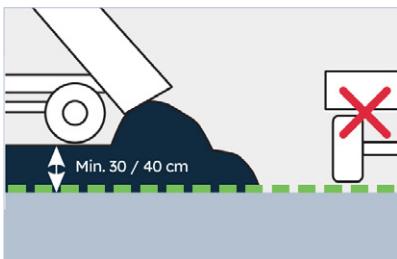


## 7. PLACING OF FILL MATERIAL

Direct driving on **MIRAGRID PEC** with any kind of vehicle is not allowed. Place fill by back dumping from trucks running on previously compacted fill areas. The fill thickness should be specified in the design. If not otherwise indicated, a minimum thickness of 40 cm (30 cm after compaction) shall be respected.

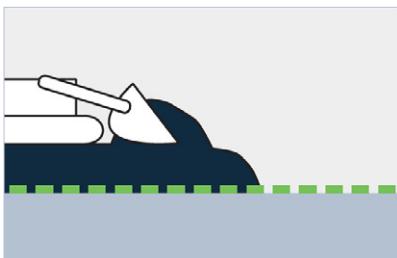

## 8. SPREADING OF FILL

Spread fill using a bulldozer or similar tracked vehicle.

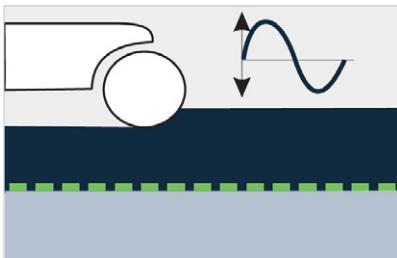

## 9. COMPACTION OF FILL

Select a method of compaction (static, dynamic) appropriate to the subgrade and the type and thickness of fill material.

## **About Solmax**

Solmax is a world leader in sustainable construction solutions, for civil and environmental infrastructure. Its pioneering products separate, contain, filter, drain and reinforce essential applications in a more sustainable way – making the world a better place.

The company was founded in 1981, and has grown through the acquisition of GSE, TenCate Geosynthetics and Propex. It is now the largest geosynthetics company in the world, empowered by more than 2,000 talented people. Solmax is headquartered in the province of Quebec, Canada, with subsidiaries and operations across the globe.

## **Uncompromised quality**

Our products are manufactured to strict international quality standards. All our products are tested and verified at our dedicated and comprehensive laboratories which maintain numerous accreditations. We offer our partners a wide scope of testing according to published standards to ensure products delivered to sites meet specified quality requirements.



# **Let's build infrastructure better**

Solmax is not a design or engineering professional and has not performed any such design services to determine if Solmax's goods comply with any project plans or specifications, or with the application or use of Solmax's goods to any particular system, project, purpose, installation, or specification.